

Lyre Harp



To reduce the chance of damage during shipping, instruments are de-tuned and movable bridges are laid flat.

The movable bridge should sit at an angle on the soundboard. The bridge should be 22 5/8" from the tuning peg of the longest string and 13" from the tuning peg of the shortest string. New harps need to be tuned several times the first few days before they function at their full potential. Regular tuning will develop the harps bright voice. Stability will increase with age.

TUNING INSTRUCTIONS

Tune strings from longest to shortest. As you turn the tuning peg, push inward to tighten. The pegs are tapered and will hold more firmly as you press inward. Use a piano or electronic tuner for reference. There are 16 strings on the Lyre Harp.

From longest to shortest we suggest they be tuned as follows:

Longest Shortest

D E F# G A B C# D E F# G A B C# D E

Copyright© 2005 Mid-East Mfg., Inc., All Rights Reserved Printed in USA

